


YX600S/YX600SC WIRING DIAGRAM

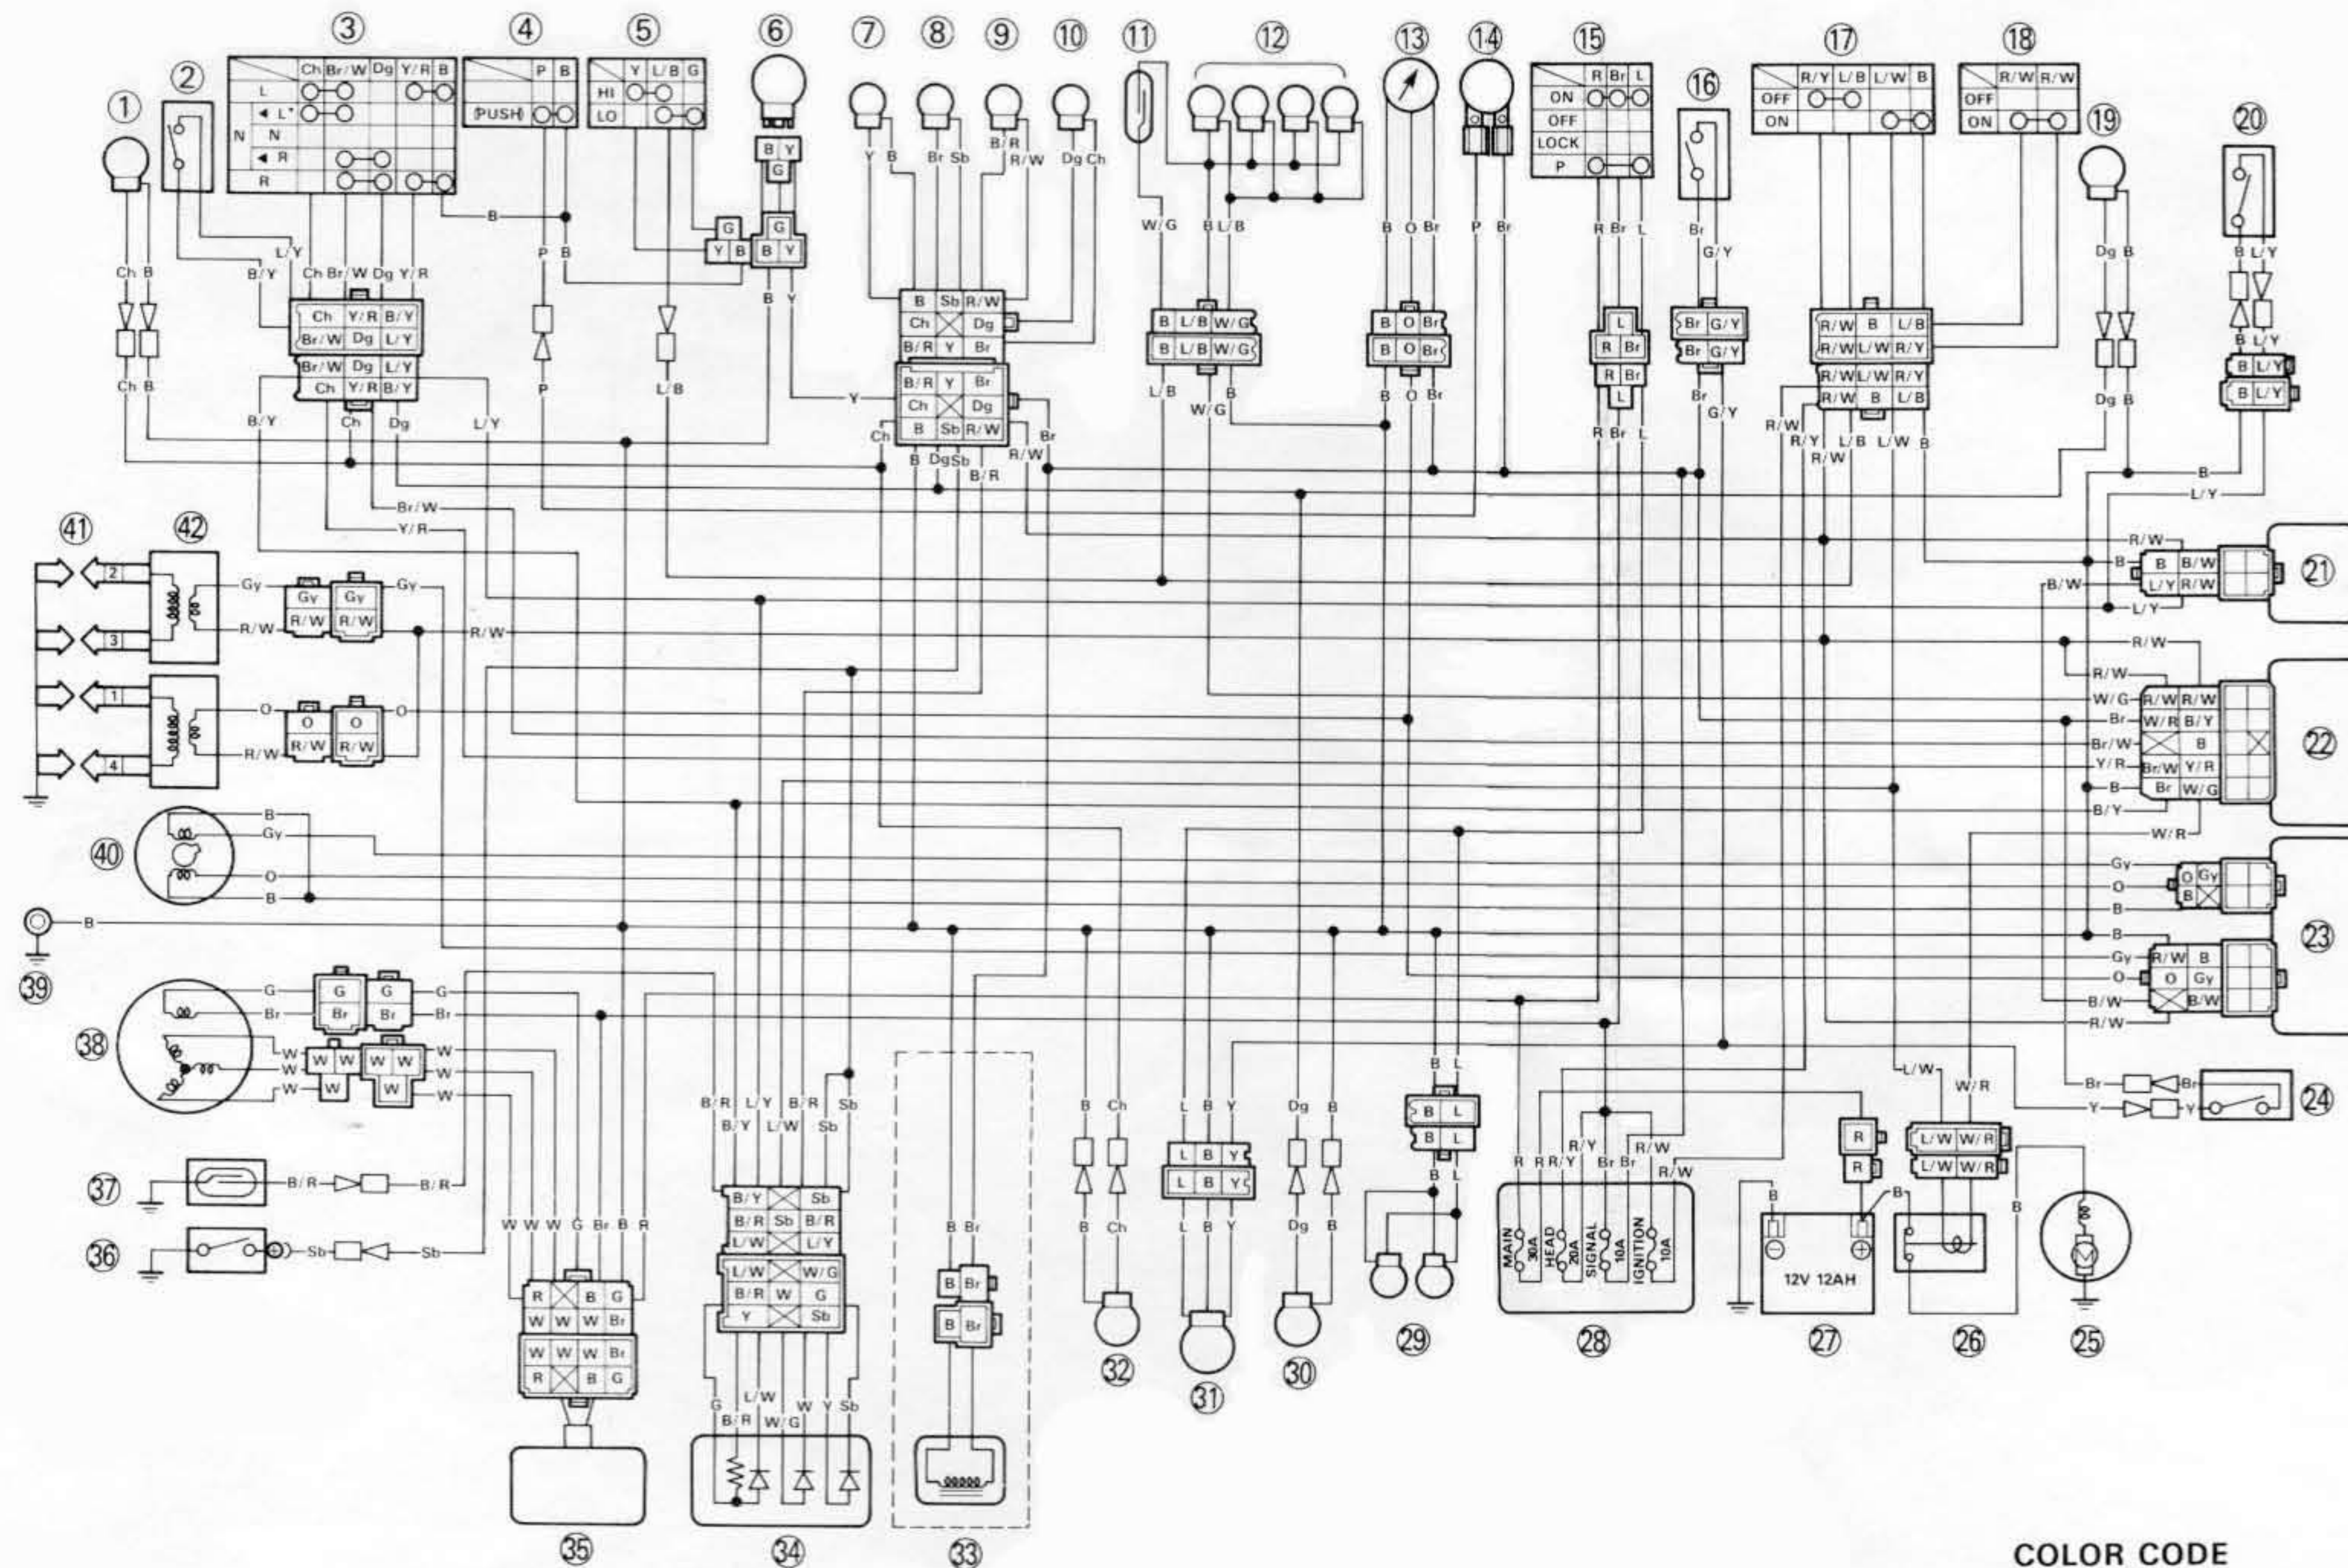

- ① Front flasher light (L)
- ② Clutch switch
- ③ "TURN" switch
- ④ "HORN" switch
- ⑤ "LIGHTS" (dimmer) switch
- ⑥ Headlight
- ⑦ "HIGH BEAM" indicator light
- ⑧ "NEUTRAL" indicator light
- ⑨ "OIL" indicator light
- ⑩ "TURN" indicator light
- ⑪ Reed switch
- ⑫ Meter light
- ⑬ Tachometer
- ⑭ Horn
- ⑮ Main switch
- ⑯ Front brake switch
- ⑰ "START" switch
- ⑱ "ENGINE STOP" switch
- ⑲ Front flasher light (R)
- ⑳ Sidestand switch
- ㉑ Sidestand relay
- ㉒ Relay assembly
- ㉓ Ignitor unit
- ㉔ Rear brake switch
- ㉕ Starter motor
- ㉖ Starter relay
- ㉗ Battery
- ㉘ Fuse
- ㉙ License light
- ㉚ Rear flasher light (R)
- ㉛ Tail/Brake light
- ㉜ Rear flasher light (L)
- ㉝ Air vent control valve (For YX600SC only)
- ㉞ Diode
- ㉟ Rectifier/regulator
- ㊱ Neutral switch
- ㊲ Oil level switch
- ㊳ AC magneto
- ㊴ Body earth
- ㊵ Pickup coil
- ㊶ Spark plug
- ㊷ Ignition coil

COLOR CODE

- R Red
- B Black
- W White
- Y Yellow
- G Green
- L Blue
- Br Brown
- Ch Chocolate
- Dg Dark green
- P Pink
- O Orange
- Sb Sky blue
- Gy Gray

- R/W Red/White
- R/Y Red/Yellow
- B/W Black/White
- B/Y Black/Yellow
- B/R Black/Red
- W/R White/Red
- W/G White/Green
- Y/R Yellow/Red
- G/Y Green/Yellow
- L/W Blue/White
- L/Y Blue/Yellow
- L/B Blue/Black
- Br/W Brown/White